




**1** Position the undercarriage directly underneath the AXXESSPLUS lid and mark where the screw ports are situated. Preferably drill pilot holes. Take note of undercarriage orientation (see 3)

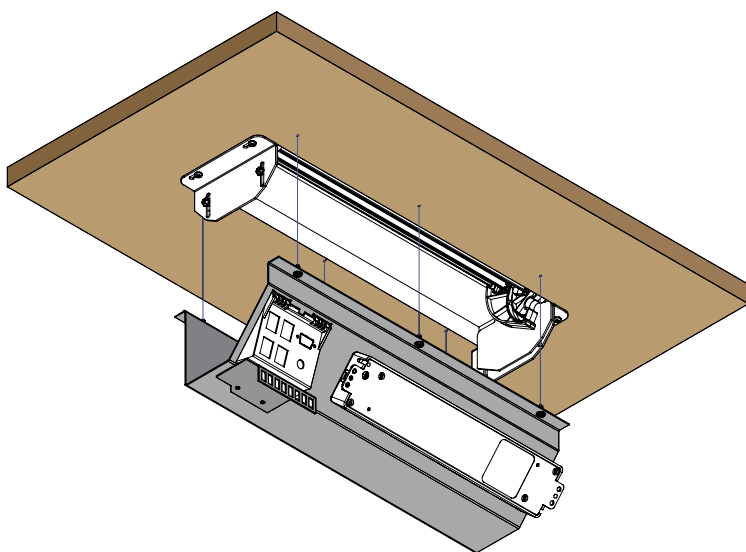


**2** Using suitable screws screw the undercarriage into position

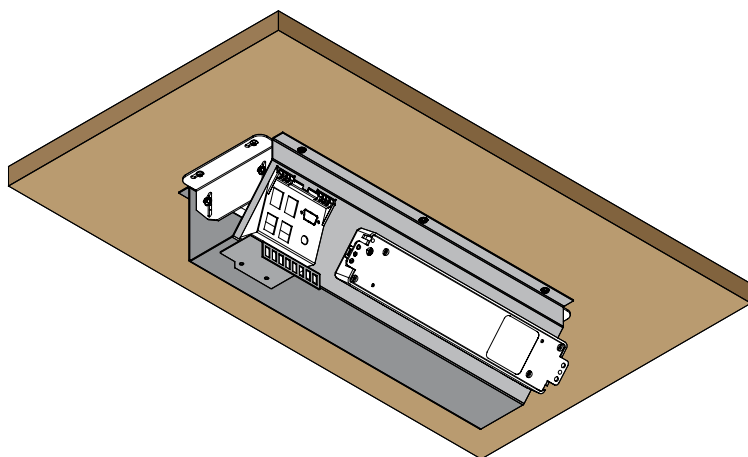

**3** Overall depth and width

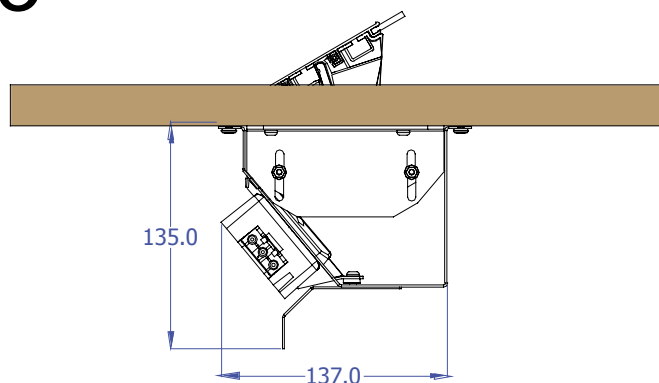

**4** Overall dimensions and clearance required for power cables and connectors

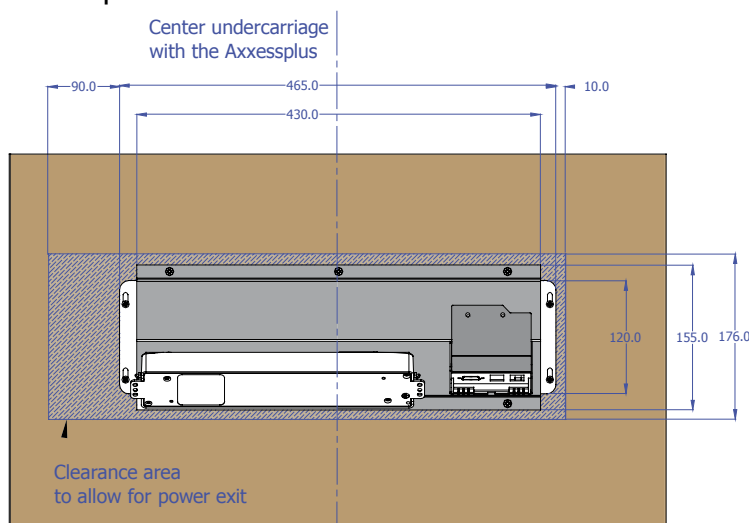

**Queries / Questions / Fragen:**  
**+44 (0) 1924 367255**

